



kanyon

ASSEMBLY REQUIREMENTS

K110	FOLDING ADIRONDACK CHAIR
1 STEP	ARMS
K111	FOLDING ADIRONDACK CHAIR W/PULLOUT OTTOMAN
1 STEP	ARMS
K120	ADIRONDACK ROCKING CHAIR
3 STEPS	ARMS & ROCKING LEGS
K140	2' ADIRONDACK GLIDER
5 STEPS	BACK TO SEAT, ARMS, TOP TO BASE
K141	2' SWIVEL ADIRONDACK GLIDER
6 STEPS	BACK TO SEAT, ARMS, TOP TO BASE
K150	4' ADIRONDACK GLIDER
	ASSEMBLED
K160	5' ADIRONDACK GLIDER
	ASSEMBLED
K171	GLIDING OTTOMAN
	ASSEMBLED
Dining Tables and Chairs	
K210	DINING HEIGHT CHAIR
4 STEPS	BACK TO SEAT, ARMS
K211	DINING HEIGHT SWIVEL CHAIR
1 STEP	TOP TO BASE
K220	DINING HEIGHT 42" SQUARE TABLE
	ASSEMBLED
K221	DINING HEIGHT 6' RECTANGLE TABLE
	ASSEMBLED
K222	DINING HEIGHT 6' OVAL TABLE
	ASSEMBLED
K310	COUNTER HEIGHT CHAIR
5 STEPS	BACK TO SEAT, ARMS, FOOTREST
K311	COUNTER HEIGHT SWIVEL CHAIR
1 STEP	TOP TO BASE
K320	BAR HEIGHT CHAIR
5 STEPS	BACK TO SEAT, ARMS, FOOTREST
K321	BAR HEIGHT SWIVEL CHAIR
1 STEP	TOP TO BASE
K324	BAR HEIGHT SADDLE STOOL
	ASSEMBLED




kanyon

ASSEMBLY REQUIREMENTS

K330	COUNTER HEIGHT 42" SQUARE TABLE
	ASSEMBLED
K331	COUNTER HEIGHT 6' RECTANGLE TABLE
	ASSEMBLED
K332	COUNTER HEIGHT 6' OVAL TABLE
	ASSEMBLED
K340	BAR HEIGHT 42" SQUARE TABLE
	ASSEMBLED
K341	BAR HEIGHT 6' RECTANGLE TABLE
	ASSEMBLED
K342	BAR HEIGHT 6' OVAL TABLE
	ASSEMBLED
K343	BAR HEIGHT 72"X28" HARVEST TABLE
	ASSEMBLED
Other Casual Seating Options	
K410	CHAISE LOUNGE WITHOUT ARMS
4 STEPS	SEAT BACK TO BASE, WHEELS
K420	CHAISE LOUNGE WITH ARMS
5 STEPS	SEAT BACK TO BASE, ARMS, WHEELS
K511	COUNTER HEIGHT TETE-A-TETE
6 STEPS	ARMS, BASE, BACK AND SEAT, TRAY
K512	BAR HEIGHT TETE-A-TETE
6 STEPS	ARMS, BASE, BACK AND SEAT, TRAY
K610	4' ADIRONDACK SWING
5 STEPS	BACK TO SEAT, ARMS, CHAIN
K620	5' ADIRONDACK SWING
5 STEPS	BACK TO SEAT, ARMS, CHAIN
Accessory Items	
K710	BASIC FOLDING END TABLE
	ASSEMBLED
K720	DELUXE FOLDING END TABLE W/SHELF
	ASSEMBLED
K750	UNIVERSAL CUPHOLDER
	ASSEMBLED

POLY ADIRONDACK FOLDING CHAIR

EASY ASSEMBLY INSTRUCTIONS

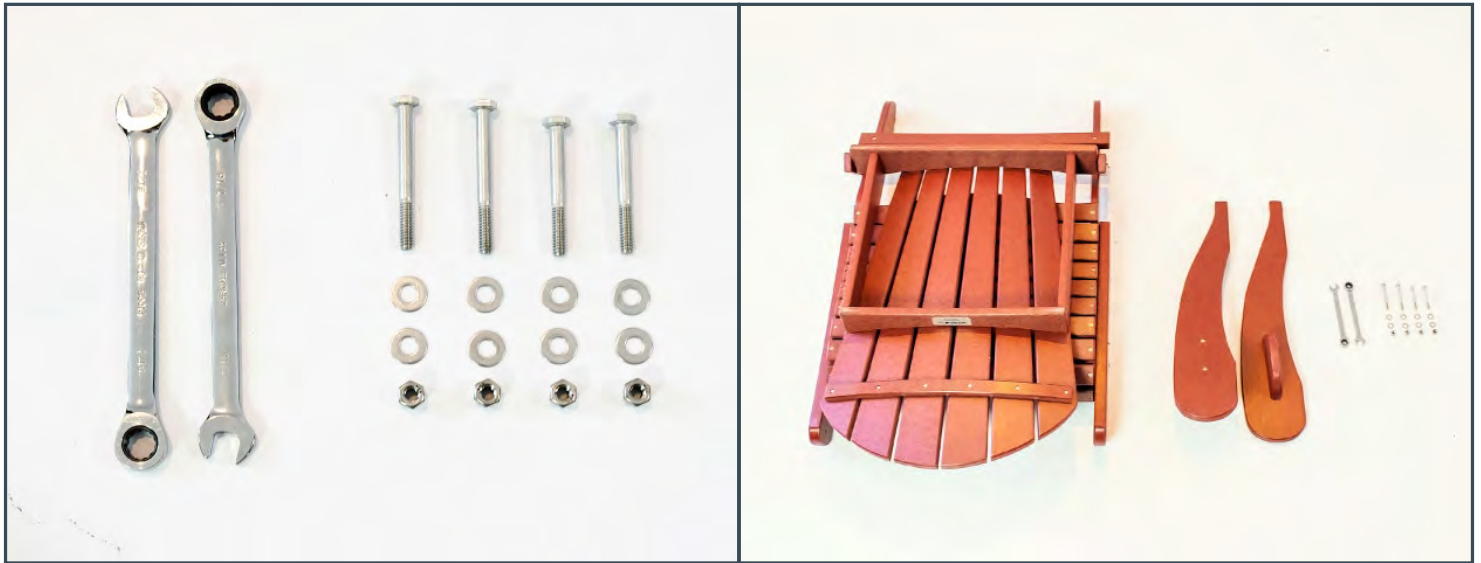

Step 1 (Open legs and attach arms)



Lay the chair flat and open the front legs. Align the hole on the front side of the arm with the front leg. Insert a short bolt into the washer, arm and front leg. Slide on another washer and tighten a nut onto the bolt.



Lift the back and align with the arm. Insert a long bolt into the washer, arm and front leg. Slide on another washer and tighten nut onto bolt.

(Repeat process for opposite side)

FOLDING CHAIR CONT.



Step 2 (Fold and open chair)



Fold the chair closed and reopen while applying upward pressure on the back of the chair.

Step 3 Tighten bolts



Step 4 ENJOY!


Customer Service: Call 1-866-872-3437. Ask for Darren.

FOLDING ADIRONDACK CHAIR W/ PULL OUT OTTOMAN

EASY ASSEMBLY INSTRUCTIONS



Step 1 (Attach the arms to seat)

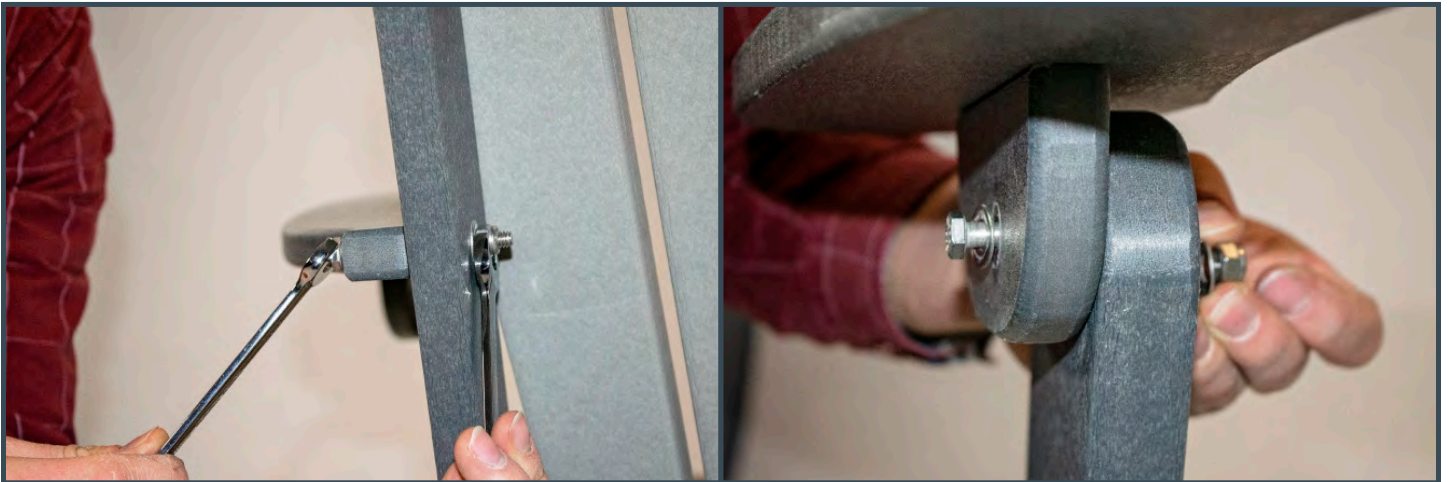

Unfold the back by standing it up. Align the arm holes with the holes in the back and use a bolt and washer to connect. Repeat on other side. Then place the half circle of the arm on the outside of the legs and align the holes. Connect with a bolt and washer and tighten. Repeat on the other side.

FOLDING ADIRONDACK CHAIR W/ PULL OUT OTTOMAN CONT.

EASY ASSEMBLY INSTRUCTIONS

Step 2 (Extend)

Extend the ottoman by pulling it forward from the chair until it's in the fully extended position, making sure the legs are in a stable position to support it.



Step 3 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.

POLY ADIRONDACK ROCKING CHAIR

EASY ASSEMBLY INSTRUCTIONS



Step 1 (Open legs and attach arms)



Lay the chair flat and open the front legs. Align the hole on the front side of the arm with the front leg. Insert a short bolt into the washer, arm and front leg. Slide on another washer and tighten a nut onto the bolt.




Lift the back up and insert a long bolt into the washer, back of the arm and back. Slide on another washer and tighten a nut onto the bolt.

(With the legs out and seat back already up, repeat steps 1 & 2 for opposite side)

ROCKING CHAIR CONT.

Step 3 (Attach runners)

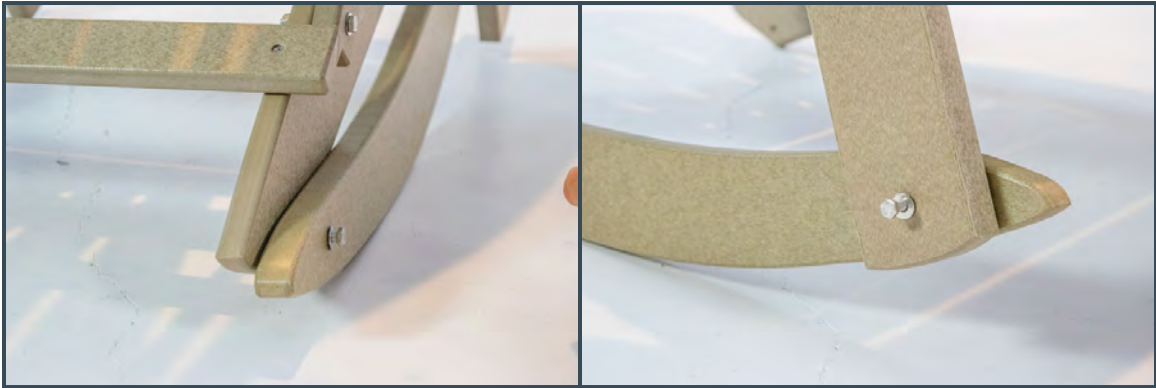

Place the front of the runner on the inside of the front leg. Insert a long bolt into the washer, front leg and runner. Slide on another washer and tighten a nut onto the bolt.



Place the back of the runner on the outside of the back legs. Insert a long bolt into the washer, front leg and runner. Slide on another washer and tighten nut onto bolt.

(Repeat this process for the opposite side)

ROCKING CHAIR CONT.




Step 4 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.

POLY ADIRONDACK GLIDER

EASY ASSEMBLY INSTRUCTIONS

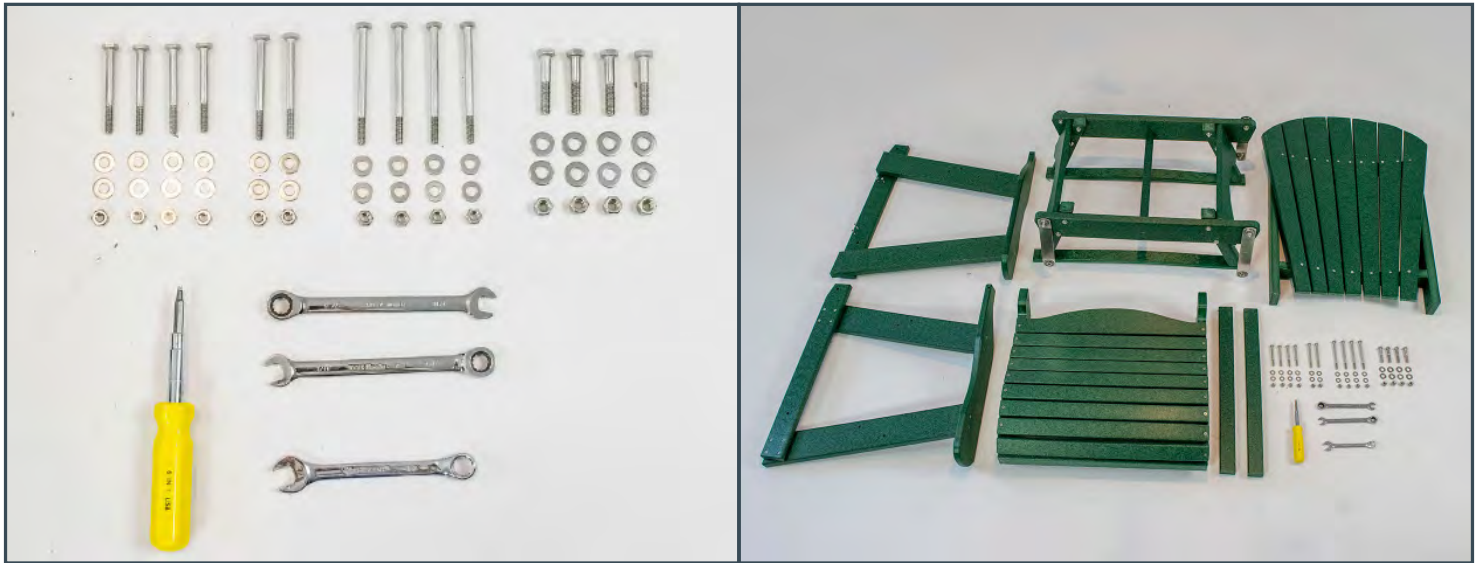

Step 1 (Attach arms to seat)



Set the seat on its side then set the arms on the side of the side ensuring the bolt holes align. Insert a short bolt into the washer, top hole of the front arm brace and seat. Slide on another washer and tighten nut onto bolt. Using another of the same bolt, repeat this process for the lower hole.

For both holes on the back arm brace, insert a long bolt into the washer and set in the holes of the back brace and seat. You may use a hammer to pound the bolts down until flush.

(Repeat this process for the opposite side)

GLIDER CONT.

Step 2 (Attach back to chair)




Align the holes midway up the back with the holes on the back of the arms. For both sides, insert a medium bolt into the washer, arms and back then slide on another washer to each and tighten nuts onto the bolts.

Align the holes on the bottom of the back with the holes that set the bolts in during step 1. You may use a hammer to pound the bolts all the way through then for each bolt, slide on another washer and tighten nut onto bolts.

Step 3 Tighten all bolts in the chair

Step 4 (Attach chair to base)

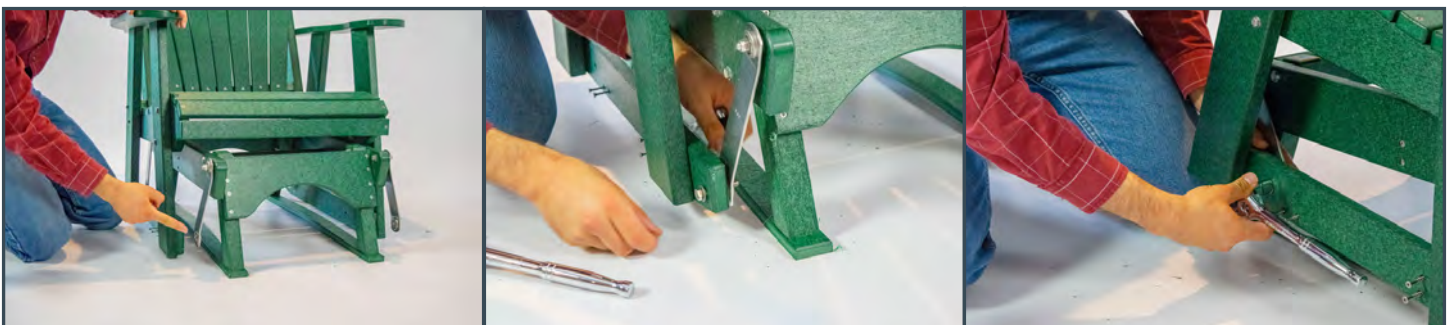

*The front hangers on the base are 1" shorter than the back
With the front facing forward, slide the base under the chair.

Insert one of the short thicker bolts into the washer and front of chair. Lift the side of the chair and push the bolt through the front hanger. Slide on another washer and tighten nut onto bolt.
(Repeat this process for the back hanger.)

Repeat the hanger bolting process for the opposite side then tighten all bolts.

GLIDER CONT.

Step 5 (Attach gliding braces)



Horizontally align the front sliding brace with the screws in the bottom arm brace. Ensure the sliding brace is flush with the bottom arm brace and drive screws in.

(Repeat this process for the opposite side)

Vertically align the back gliding brace with the screws in the bottom arm brace and drive screws in. Ensure the sliding brace is flush with the bottom arm brace and drive screws in.

(Repeat this process for the opposite side)




Step 6 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.

SWIVEL GLIDER CONT.

Step 2 (Set bolts in front of arms)

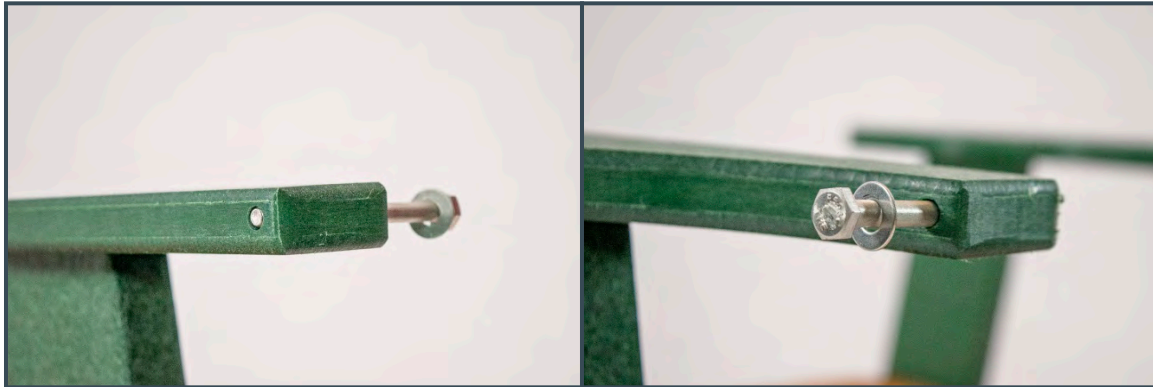

Place the medium bolt and washer in the front of the arms, but don't push it all the way through. This will be where the arm and back connect. When the back is added, then the bolts will be pushed through and tightened.

Step 3 (Attach back side of arms to seat)



Place a long bolt and washer on the outside of the arm and push it through the seat, but don't push it all the way through. This will be where the back side of the arm, seat and back connect. When the back is added, then the bolts will be pushed through and tightened.

SWIVEL GLIDER CONT.

Step 4 (Attach the back)




Once the back is in place and aligned with the upper arm holes, the bolts that have already been placed can be pushed through and tightened.



Align the bottom of the back with the arm and seat holes and push the bolts through and tighten.

(Repeat process for opposite side.)

Step 5 (Attach chair to base)

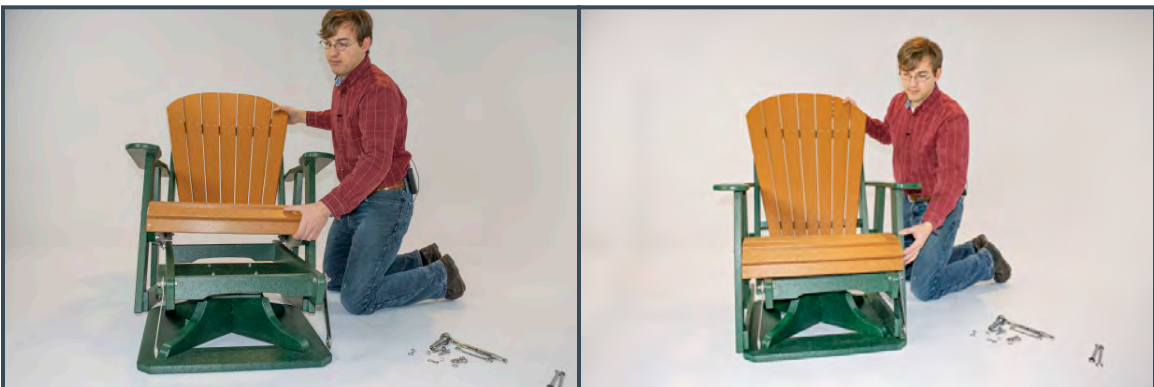

Slide the chair onto the base. The hangers are the same length, so it doesn't matter which are in front or back.

SWIVEL GLIDER CONT.



Line up the holes in the base with the holes in the brackets and use a bolt and a washer to connect and tighten.

(Repeat process for opposite side.)

Step 6 (Tighten all bolts)



Step 7 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.

POLY ADIRONDACK COUNTER CHAIR

EASY ASSEMBLY INSTRUCTIONS




Step 1 (Attach arms and legs to base)



Align the right legs to the right side of the base and insert a short bolt through the washer, leg, and base for the front and back. Slide on another washer and tighten a nut onto the bolt.
(Repeat process for left side)

Step 2 (Attach seat)

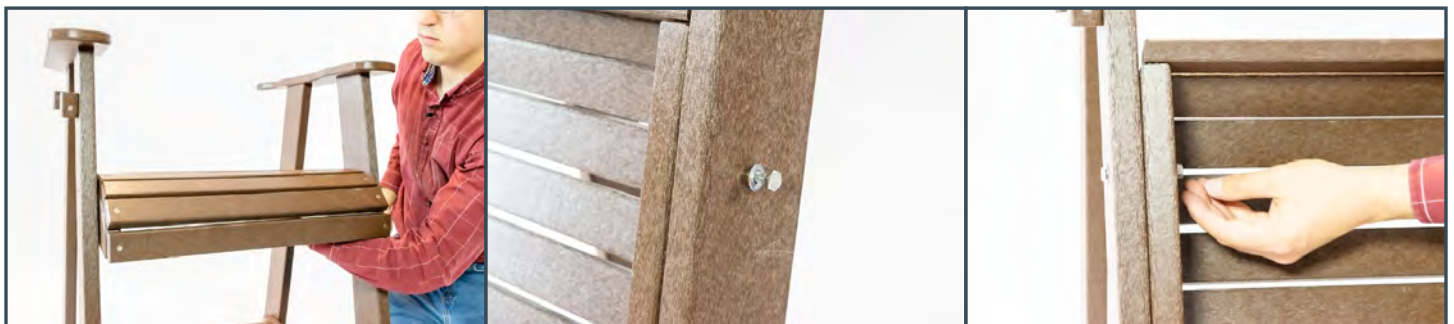

Align the holes on the front of the seat to the holes just under the armrests. Insert a short bolt through the washer, arm, and seat. Slide on another washer and tighten a nut onto the bolt.
(Repeat process for opposite side)

COUNTER CHAIR CONT.

Step 3 (Attach back)



For right and left sides, insert a medium bolt through the washer and partially through the arms. Align the top holes of the seat back with the holes towards the back of the arms. Push the bolt through the arms and back. Slide on another washer and tighten a nut onto the bolts.

Step 4 (Connect back to seat)



For right and left sides, insert a long bolt through the washer and partially through the legs. Lift the seat up and push the back forward. Align the holes and push the bolts through. Slide on another washer and tighten a nut onto the bolt.

Step 5 Tighten bolts



Step 6 ENJOY!


Customer Service: Call 1-866-872-3437. Ask for Darren.

DINING, COUNTER, BAR HEIGHT SWIVEL CHAIR

EASY ASSEMBLY INSTRUCTIONS



Step 1 (Attach chair to base)

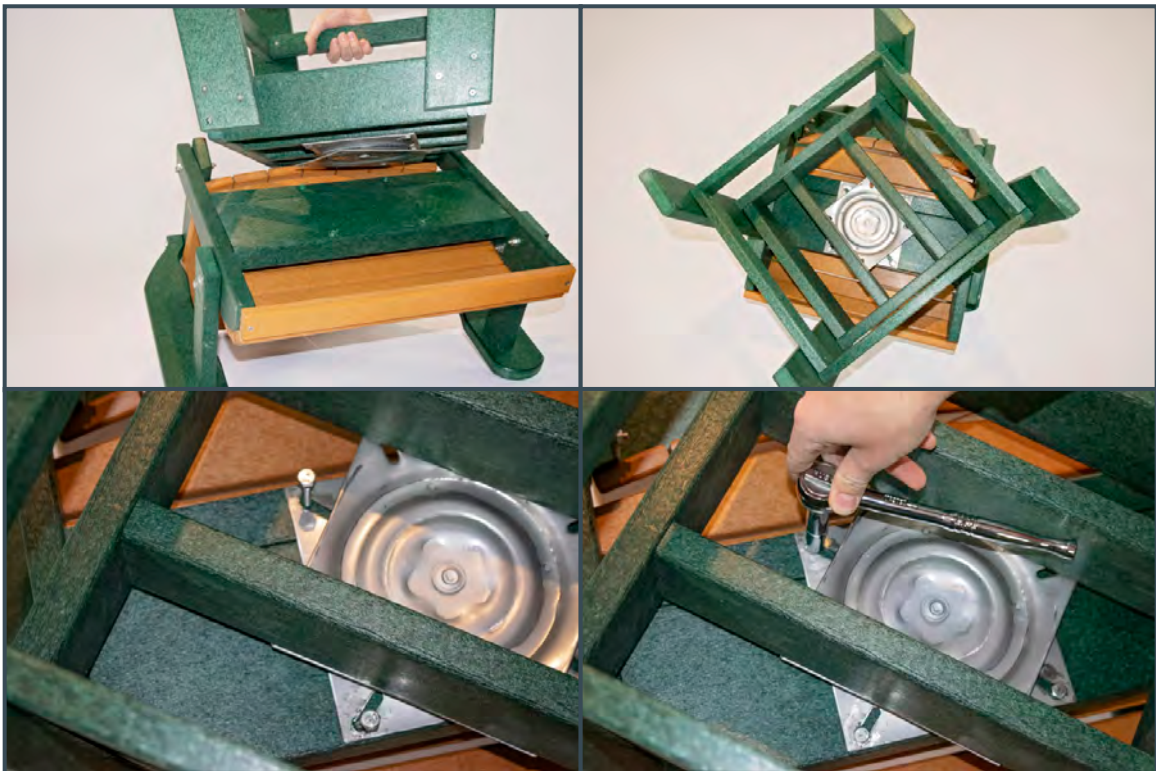

Place the chair upside down. Angle the plate so you can see the holes in the corners and place the base on the chair. Place and tighten the bolts on the four corners.


DINING, COUNTER, BAR HEIGHT SWIVEL CHAIR

EASY ASSEMBLY INSTRUCTIONS



Step 2 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.

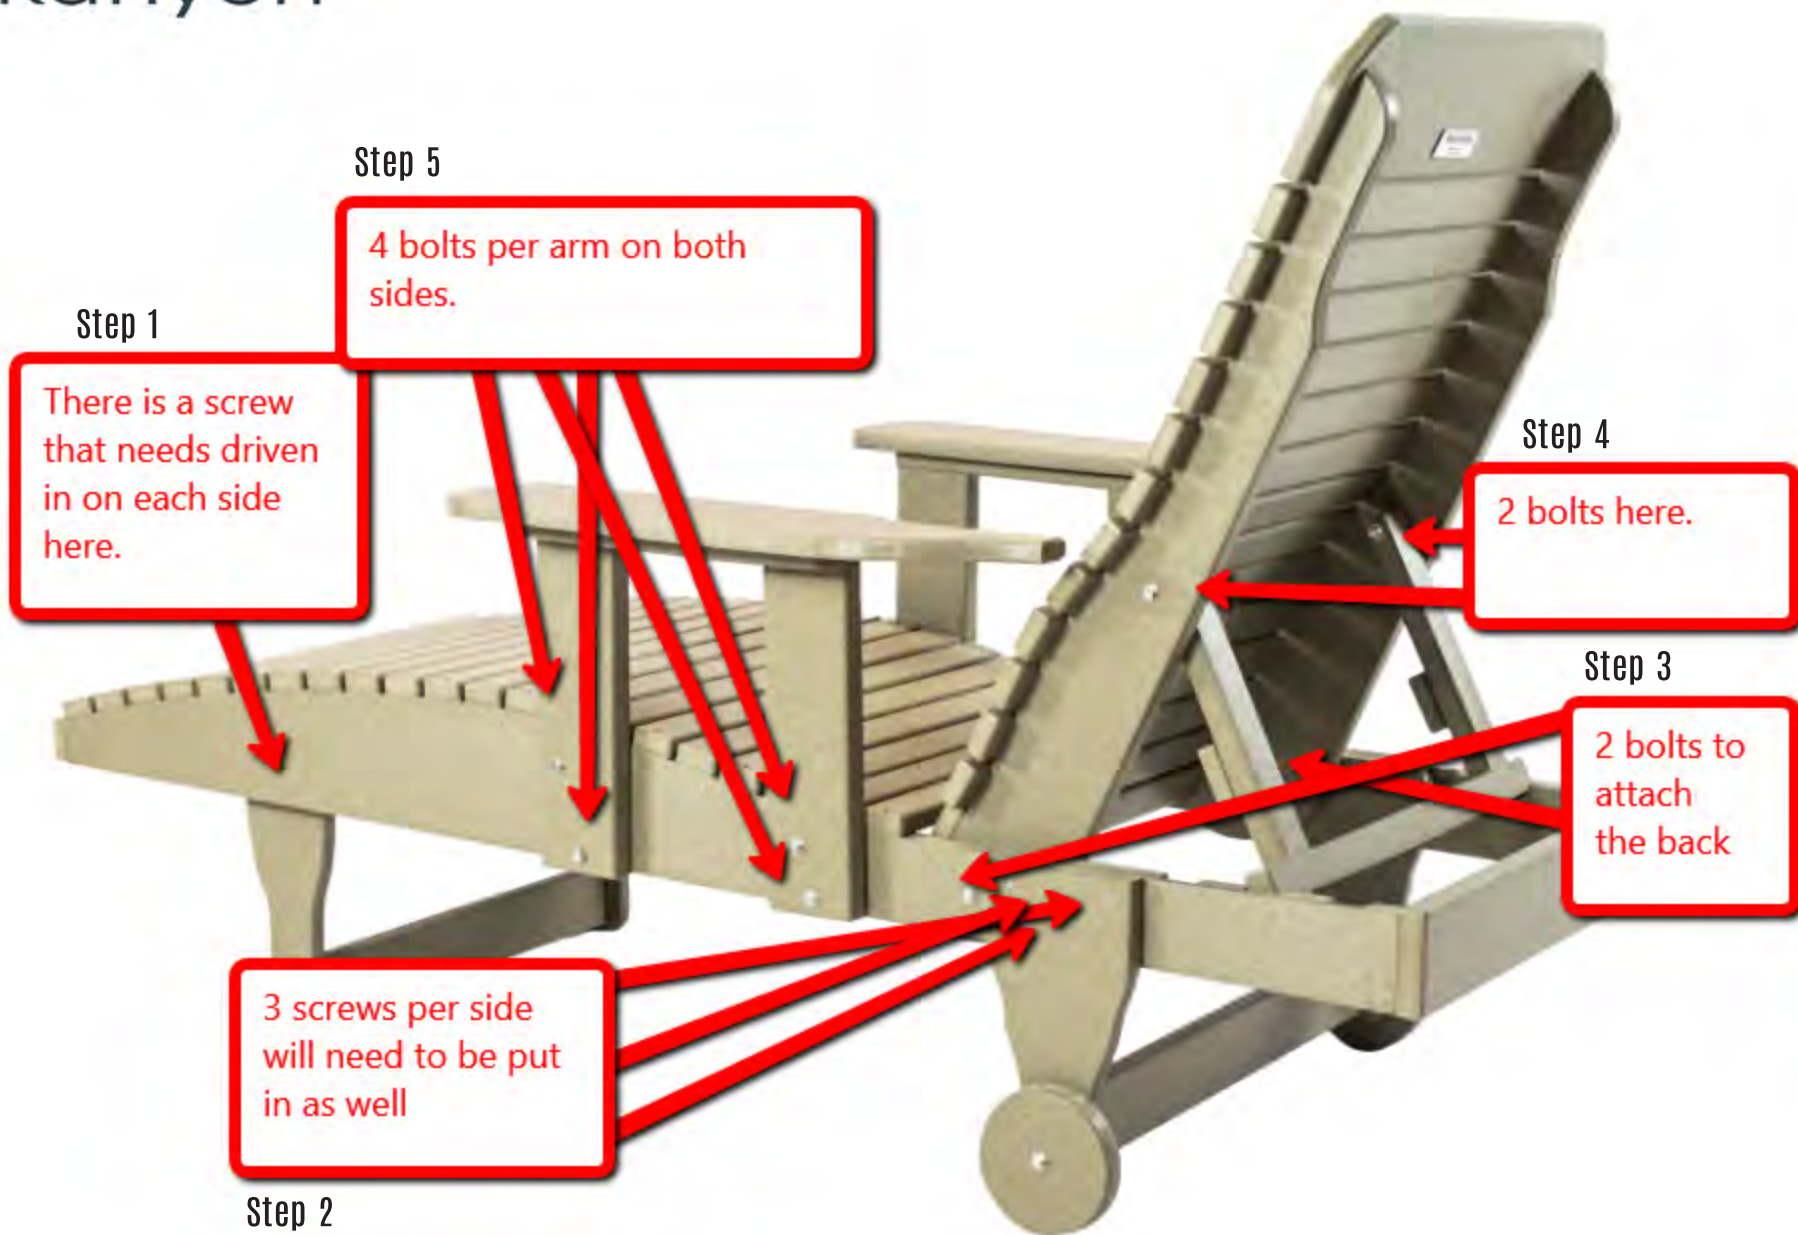

Step 5

4 bolts per arm on both sides.

Step 1

There is a screw that needs driven in on each side here.

Step 4

2 bolts here.

Step 3

2 bolts to attach the back

3 screws per side will need to be put in as well

Step 2

TETE-A-TETE SET

EASY ASSEMBLY INSTRUCTIONS




Step 1 (Attach arms and legs to base)



Align the right legs to the right side of the base and insert a short bolt through the washer, leg, and base for the front and back. Slide on another washer and tighten a nut onto the bolt.

(Repeat process for left side)

Step 2 (Attach seat)

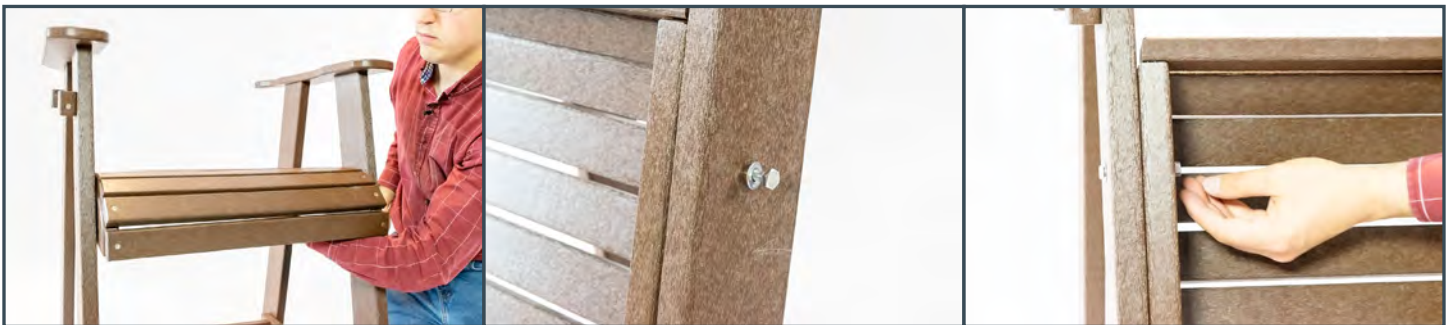

Align the holes on the front of the seat to the holes just under the armrests. Insert a short bolt through the washer, arm, and seat. Slide on another washer and tighten a nut onto the bolt.

(Repeat process for opposite side)

TETE-A-TETE SET CONT.



Step 3 (Attach back)



For right and left sides, insert a medium bolt through the washer and partially through the arms. Align the top holes of the seat back with the holes towards the back of the arms. Push the bolt through the arms and back. Slide on another washer and tighten a nut onto the bolts.

Step 4 (Connect back to seat)



For right and left sides, insert a long bolt through the washer and partially through the legs. Lift the seat up and push the back forward. Align the holes and push the bolts through. Slide on another washer and tighten a nut onto the bolt.

Step 5 (Repeat on 2nd tighten bolts)



Step 6 (Attach table)

Slide the table into the grooves in the chairs to connect them.

TETE-A-TETE SET CONT.



Step 7 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.

POLY ADIRONDACK 4', 5' SWING

EASY ASSEMBLY INSTRUCTIONS



Step 1 (Attach arms to seat)




Slide a washer onto a short bolt and insert into the top hole of the arm base. Align with the top hole towards the front of the seat and push the bolt through. Slide on another washer and tighten a nut onto the bolt.

Insert another short bolt into the washer, lowest hole on the arm base, and seat. Slide on another washer and tighten a nut onto the bolt.

4', 5' SWING CONT.

Step 2 (Attach chain)

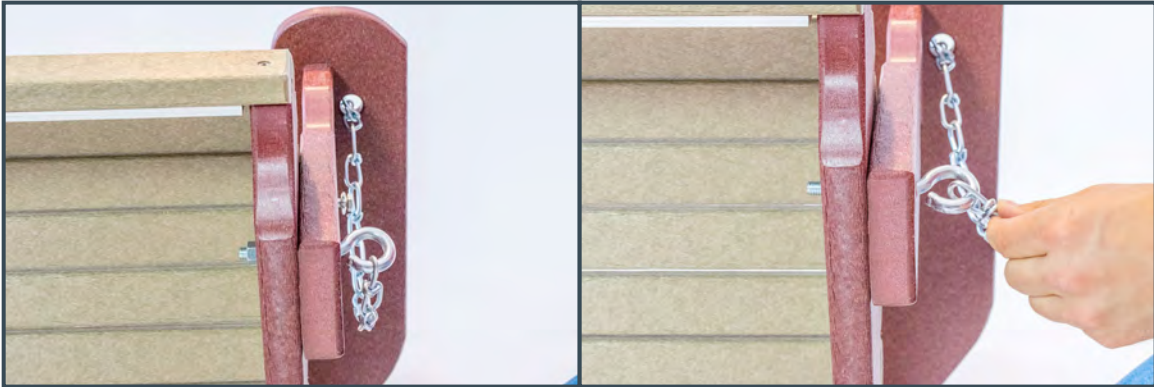

Run the chain through the hole on top of the arm and attach to the eye bolt. Insert eye bolt into the middle hole of the arm base and seat. Slide on a washer and tighten a nut onto the bolt.

(Repeat steps 1 & 2 for opposite side)

Step 3 (Attach arms and chains to back)




Pick up the back and set it across the bottom brace of the seat. Push on one side of the back to fit it snugly between the brace. Insert a long bolt into the washer, arm and back. Slide on another washer and tighten a nut onto the bolt.

(With the seat back snugly in place, repeat process for opposite side.)

4', 5' SWING CONT.



Insert a short bolt into the washer, top hole of the bottom brace and backrest. Slide another washer and tighten a nut onto the bolt. Using another short bolt, repeat this process for the lowest hole on the bottom brace.

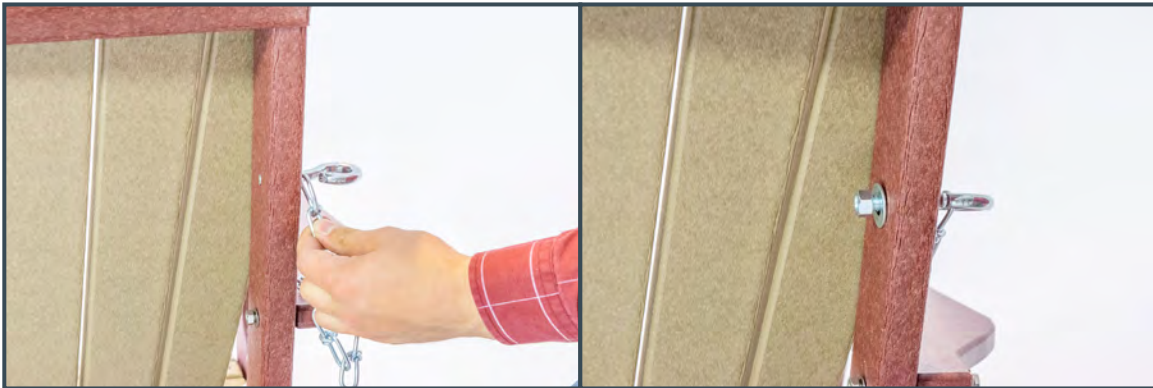

Attach open end of chain to eye bolt and insert into the remaining open hole on the back. Slide on a washer and tighten a nut onto the bolt.

(Repeat process for opposite side.)

Step 4 (Tighten Bolts)

4', 5' SWING CONT.

Step 5



Insert lag screw into washer then the hole in the center of the swing back on the bottom.
Tighten with a 7/16 wrench or socket.



Step 6 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.